

IN LAW ENFORCEMENT

AXON **flex**™



**FORT WORTH POLICE DEPARTMENT
TASER AXON FLEX ON-OFFICER VIDEO**

&

**EVIDENCE.COM
USER TRAINING**

IN LAW ENFORCEMENT

EVIDENCE.COM™



**TASER AXON FLEX ON-OFFICER VIDEO
BENEFITS**

VIDEO FROM OFFICER'S POINT-OF-VIEW

REDUCE FRIVOLOUS COMPLAINTS

FULL-SHIFT VIDEO BUFFER

SMALL HARDWARE DESIGN

MULTIPLE MOUNTING OPTIONS

SECURE VIDEO STORAGE SOLUTION

NO "DISC HANDLING"

BLUETOOTH LINK TO MOBILE DEVICE (VIEWING ONLY)

TASER AXON FLEX ON-OFFICER VIDEO COMPONENTS



EVIDENCE.COM

GARWACKI, JEFFREY (3292)
Last Login 21 Jan 2015
[SIGN OUT]

Update ID Add Category Reassign Share Download Delete Restore Export 216 Files Found | 0 files selected Page Layout: Table

ID	CATEGORY	TITLE	FILE TYPE	OWNER	UPLOADED BY	UPLOAD DATE	RECORDED DATE	STATUS	DURATION
14-0000	Administrative	Training Video	Video	Garwacki, Jeffrey	Garwacki, Jeffrey	28 Oct 2014 - 14:27:03	28 Oct 2014 - 14:24:37	Active	1:01
KT238633	Criminal	Speeding 3000 S Frwy	Video	Garwacki, Jeffrey	Garwacki, Jeffrey	06 Oct 2014 - 17:19:52	06 Oct 2014 - 15:09:27	Active	6:37
KT238630	Criminal	1800 S Frwy	Video	Garwacki, Jeffrey	Garwacki, Jeffrey	22 Sep 2014 - 17:26:05	22 Sep 2014 - 14:29:08	Active	8:10
14-89478	Criminal	DWI 1501 W Seminary	Video	Garwacki, Jeffrey	Garwacki, Jeffrey	17 Sep 2014 - 18:04:53	17 Sep 2014 - 16:01:02	Active	3:49
ACCIDENTAL	None	AXON Flex Video 2014-09-11 1203	Video	Garwacki, Jeffrey	Garwacki, Jeffrey	11 Sep 2014 - 17:55:14	11 Sep 2014 - 12:00:13	Active	2:49
INV	None	3100 E Seminary	Video	Garwacki, Jeffrey	Garwacki, Jeffrey	09 Sep 2014 - 10:18:36	08 Sep 2014 - 23:06:15	Active	5:08
KT198918	Criminal	2100 Altamesa	Video	Garwacki, Jeffrey	Garwacki, Jeffrey	09 Sep 2014 - 10:15:21	08 Sep 2014 - 20:39:32	Active	2:04
KT198917	Criminal	2100 Altamesa	Video	Garwacki, Jeffrey	Garwacki, Jeffrey	09 Sep 2014 - 10:16:53	08 Sep 2014 - 20:29:04	Active	4:36
14-86373	Criminal	Photo 2014-09-08 195029	Image	Garwacki, Jeffrey	Garwacki, Jeffrey	09 Sep 2014 - 17:54:09	08 Sep 2014 - 19:50:29	Active	N/A
14-86373	Criminal	Photo 2014-09-08 195015	Image	Garwacki, Jeffrey	Garwacki, Jeffrey	09 Sep 2014 - 17:53:49	08 Sep 2014 - 19:50:15	Active	N/A
14-86373	Criminal	Photo 2014-09-08 195000	Image	Garwacki, Jeffrey	Garwacki, Jeffrey	09 Sep 2014 - 17:53:39	08 Sep 2014 - 19:50:00	Active	N/A
14-86373	Criminal	Photo 2014-09-08 194938	Image	Garwacki, Jeffrey	Garwacki, Jeffrey	09 Sep 2014 - 17:54:00	08 Sep 2014 - 19:49:38	Active	N/A

TASER AXON FLEX ON-OFFICER VIDEO

OFFICER POINT-OF-VIEW



POV video – When it matters most... Show what really happened

Your perspective matters. Point of view video is not only critical in capturing what really happened but also getting that video record accepted as evidence. In a ground breaking US Supreme Court Case (Graham v. Connor 490 U.S. 386 (1989)) the court stated, "The 'reasonableness' of a particular use of force case must be judged from The Perspective of a Reasonable Officer on the Scene."



AXON FLEX Watch the incident unfold from the officers perspective. AXON FLEX



Dash Cam
View of the street outside the incident



TASER AXON FLEX ON-OFFICER VIDEO FULL SHIFT BUFFER



Full shift video buffer- You never know when the action will happen

Reach back 30 seconds into the past and retrieve the events leading up to the event. When your honor is on the line, don't let a 3-second cell phone clip define you. The AXON Flex controller has a 12+ hour battery that allows for full shift video buffer.



POLICE ENFORCEMENT



TASER AXON FLEX ON-OFFICER VIDEO MOUNTING OPTIONS

Limitless mounting options – There's no such thing as one size fits all

With multiple mounting options you can wear your AXON Flex equipment just the way you like. The AXON Flex system includes multiple mounts that can be worn in countless variations.

- Oakley Flak Jacket
- Headbands (Lowrider, Hi-rise)
- Collar Mount
- Ball Cap Mount
- Helmet Mount
- Epaulette Mount
- AXON Flex Body Cam
- In Dash Car Mount
- And More...





TASER AXON FLEX ON-OFFICER VIDEO OAKLEY FLAK JACKET INTEGRATION



Seamless Oakley eyewear Integration – Optimizes comfort, safety, and clarity

Protect your vision as well as the truth by seamlessly mounting AXON Flex to the Oakley Flak Jacket. There are over 29 lens options for the Flak Jacket including: Ballistic, Clear, Transition, Prescription and more. The Flak Jacket's lens and frame are designed for anti-fog and come equipped with nose pads for full shift comfort.



TASER AXON FLEX ON-OFFICER VIDEO

LOW LIGHT TECHNOLOGY



Retina Low Light – Because most critical events happen at night

With Retina Low-Light we've used advanced imaging technology to increase the camera's light sensitivity, allowing each pixel to capture light comparable to the human retina. We've highly customized this capability to give our users spectacular low light imaging that was designed to match the human eye. Retina Low-Light – there's nothing else like it.

AXON FLEX



COMPETITION



TIME OF DAY: DUSK

TASER AXON FLEX ON-OFFICER VIDEO

WIDE ANGLE LENS



Wide angle lens – Capture it all

AXON Flex has a 75-degree lens that provides for a greater field of view – allowing officers to capture more of what they experienced.



TASER AXON FLEX ON-OFFICER VIDEO

AXON MOBILE



AXON Mobile (optional smartphone application) – Let's consult the video... Now.

Android™ or iPhone™ application

- Secure live camera view stream to phone.
- Playback files stored on camera through the phone application (no data stored on phone – only remotely viewed – all evidence is secured within the AXON Flex camera)
- Automatic GPS tagging on video capture
- Add metadata to files on camera from phone (title, category, case number)*
- Secure proprietary blue-tooth streaming to smartphone utilizing [Looxcie](#) technology





TASER AXON FLEX ON-OFFICER VIDEO

WEATHER RESISTANCE



Weather resistant and ruggedized: Crime doesn't wait for a sunny day

From the rainy streets of Seattle to the humid beaches Florida, AXON Flex equipment was designed to withstand use in the harshest environments.

IN LAW ENFORCEMENT

TASER AXON FLEX ON-OFFICER VIDEO DATA SECURITY



Secure from sensor to storage

Video hash to ensure no tampering with video, untouched by human hands from sensor to storage (exceeds IACP security standards).



TASER AXON FLEX ON-OFFICER VIDEO EVIDENCE TRANSFER MANAGER

Simply dock and go... It's that easy with automated workflows

Spend more time on patrol, not sitting at a computer uploading files. At the end of your shift, simply dock your AXON Flex camera and controller in the Evidence Transfer Manager ETM, where the camera automatically uploads to the EVIDENCE.com website. The next day, your unit is charged and ready to go.

At the end of a long shift you don't want sit down and transfer videos. With AXON Flex, simply dock and go.



TASER AXON FLEX ON-OFFICER VIDEO EVIDENCE.COM




EVIDENCE.COM cloud computing – All of your digital evidence in one place

AXON Flex technology effortlessly connects with EVIDENCE.COM services to provide an “always-on,” instantly available, infinitely scalable system that is monitored 24-7 to secure your digital evidence.


IN LAW ENFORCEMENT

EVIDENCE.COM  **TM**

TASER AXON FLEX ON-OFFICER VIDEO DEVICE OPERATION

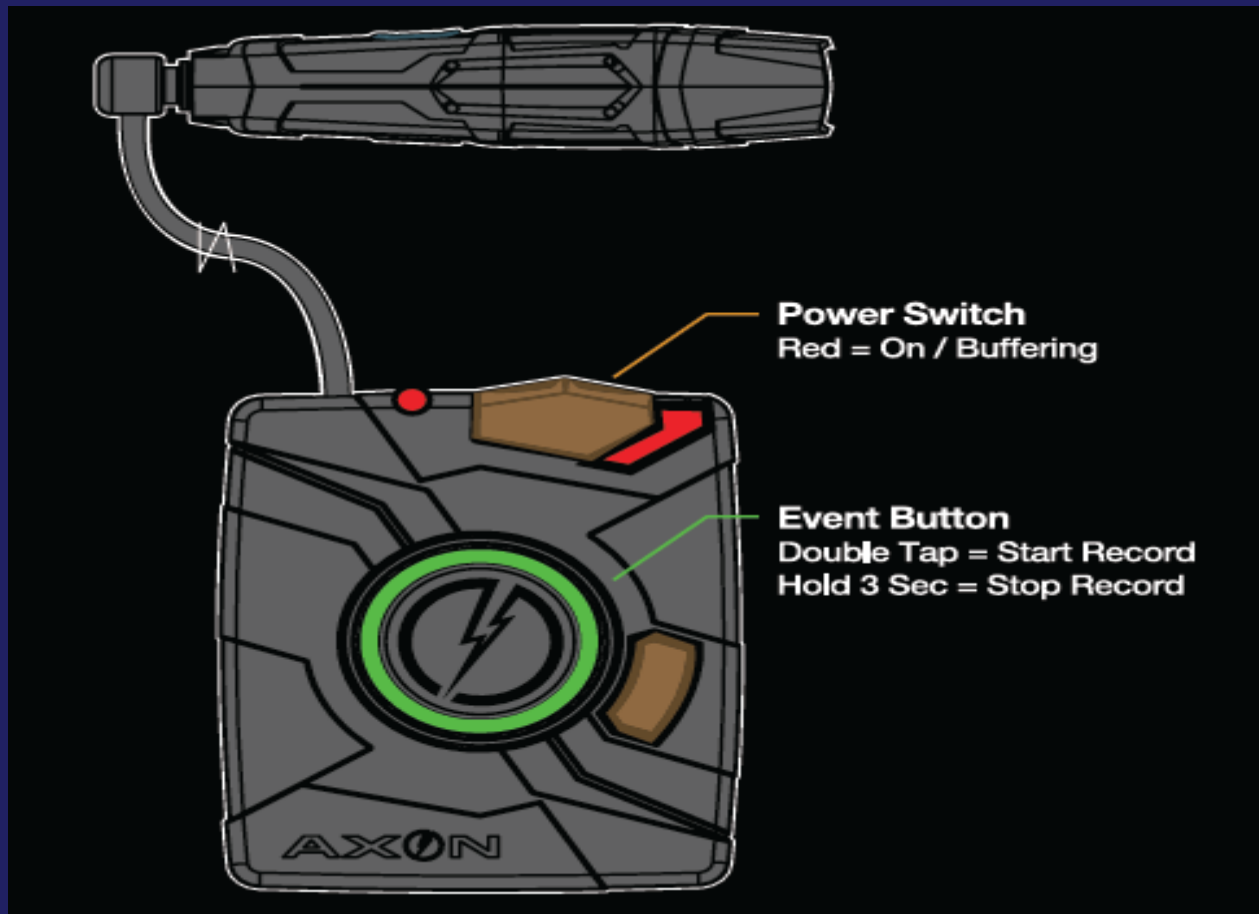

TASER AXON FLEX ON-OFFICER VIDEO DEVICE OPERATION

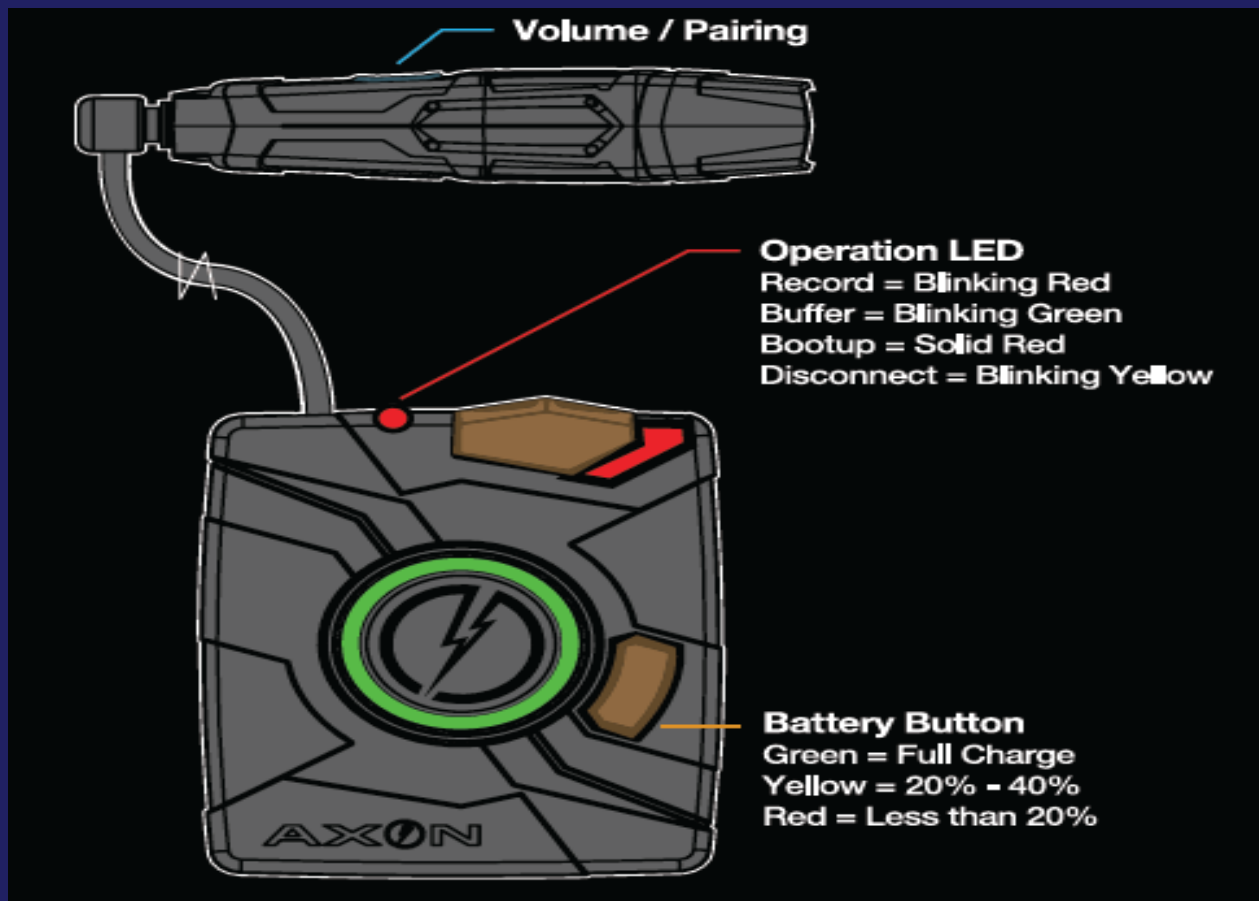

TASER AXON FLEX ON-OFFICER VIDEO UPLOADING VIDEOS



When you dock your AXON Flex camera to the Evidence Transfer Manager (ETM), all videos on camera will automatically begin to upload to EVIDENCE.com services sequentially.

Camera Function	Camera LED Indication
Uploading Video	Blinking Yellow
Awaiting Upload	Solid Yellow
Device Ready	Solid Green
Internal Battery Charging	Solid Yellow
Error	Blinking Red and Yellow

When you dock your AXON Flex controller, it will begin to charge.


TASER AXON FLEX ON-OFFICER VIDEO

AXON MOBILE PAIRING



VIEWING ONLY

NO VIDEO IS
RECORDED TO
MOBILE
DEVICE

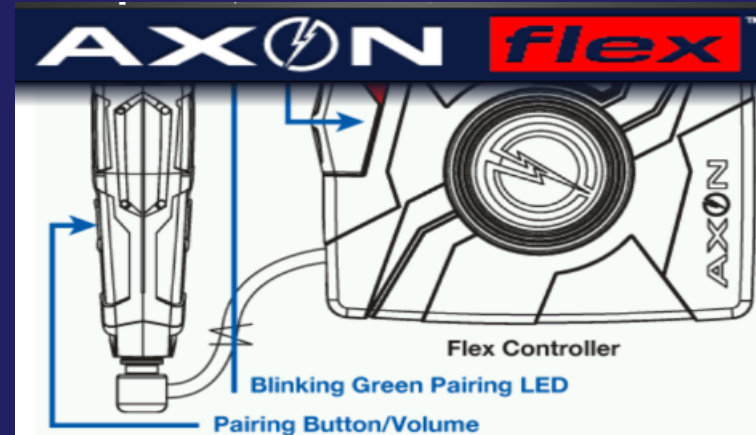

Step 1

Ensure that the power is in the Off position.

Step 2

Press and hold the pairing button.

Step 3

While holding the pairing button, move the power switch to the On position.

Step 4

Pairing LED will blink to signify that the device is in the pairing mode.



TASER AXON FLEX ON-OFFICER VIDEO EVIDENCE.COM

EVIDENCE.COM

SIGN IN

REGISTER

FORGOT USERNAME OR PASSWORD

FORT WORTH POLICE DEPT -TX
(not my agency)

Username:

Password:

Sign In

Forgot your username or password?

[HTTPS://FORTWORTHTEXAS.EVIDENCE.COM](https://fortworthtexas.evidence.com)

TASER AXON FLEX ON-OFFICER VIDEO EVIDENCE.COM

EVIDENCE.COM

SIGN IN

REGISTER

FORGOT USERNAME OR PASSWORD

FORT WORTH POLICE DEPT -TX
(not my agency)

Username:

← Enter Your User Name

Password:

← Enter Your Password



Sign In

Forgot your username or password?

FWPD Video Site

[HTTPS://FORTWORTHTEXAS.EVIDENCE.COM](https://fortworthtexas.evidence.com)

SYSTEM ALERTS

-  **Warning:** IP Restrictions not enabled [Update](#)
-  **Warning:** CEW diagnostic data sharing not enabled [Update](#)

CRITICAL DEVICE ALERTS

MODEL	SERIAL NO.	ERROR STATUS	FIRMWARE	WARRANTY
X2	zzx290ep8	Critical Error	Rev.03.045	Not available

UPCOMING EVIDENCE DELETIONS

User Initiated

TITLE	OWNER	DELETION DATE	OPTIONS
No Results Found			

System Initiated

TITLE	OWNER	DELETION DATE	OPTIONS
AXON Flex Video 2014-07-26 1120	Stanley, Gregory	In 29 minutes	
AXON Flex Video 2014-07-26 1351	Stanley, Gregory	In 3 hours	
AXON Flex Video 2014-07-26 1424	Donahey, Khristopher	In 3 hours	
AXON Flex Video 2014-07-26 1457	Stanley, Gregory	In 4 hours	
AXON Flex Video 2014-07-26 1530	Cox, Chris	In 4 hours	
AXON Flex Video 2014-07-26 1551	Harris, Kendall	In 4 hours	
Info Only 6117 Pullman Ln #1321	Smith, Andrew	In 5 hours	
51 7249 Las Vegas RTF	Rogers, Dustin	In 6 hours	
AXON Flex Video 2014-07-26 1721	Guajardo, Arthur	In 6 hours	

Q EVIDENCE SEARCH

ID:

Date:

Owner:

Tag:

Search Here

Report Number Goes Here

Name of Officer That Recorded Video


ry:

ile Type:

tatus:

lagged:

Click Search

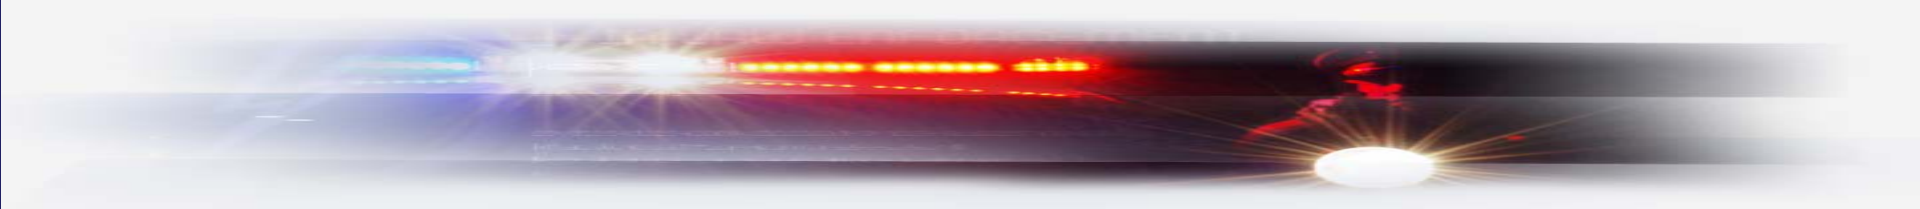


Update ID Add Category Reassign Share Download Delete Restore Export 1 Files Found | 0 files selected Page Layout: Table

ID	CATEGORY	TITLE	BY	UPLOAD DATE	RECORDED DATE	STATUS	DURATION
14-0000	Administrative	Training Video	Jeffrey	28 Oct 2014 - 14:27:03	28 Oct 2014 - 14:24:37	Active	1:01

Click Video Title

All Videos That Match Criteria

Training Video | [edit]
ID: 14-0000

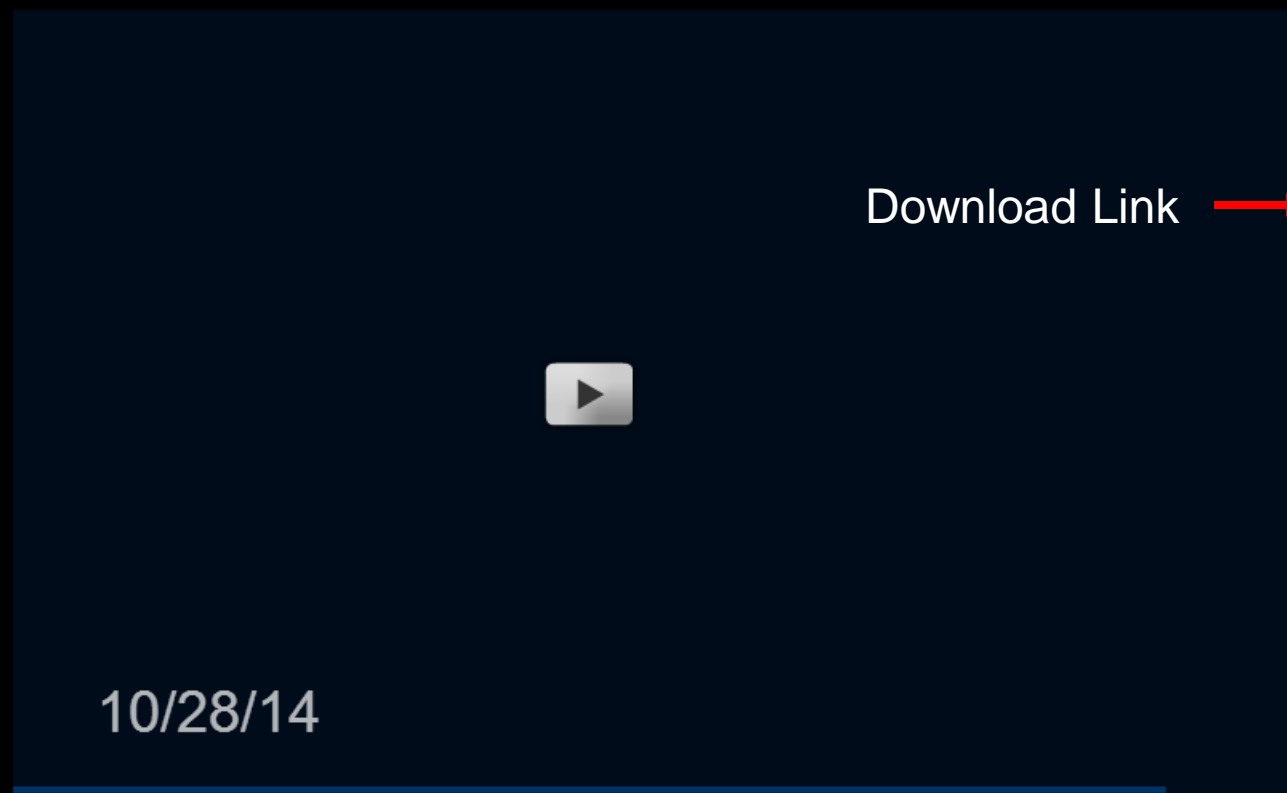

Assigned To: **Garwacki, Jeffrey (3292)**
Recorded: 28 Oct 2014 14:24:37 -05:00
Uploaded On: 28 Oct 2014 14:27:03 -05:00
Uploaded By: **Garwacki, Jeffrey (3292)**
Deletion scheduled for: **Unscheduled (Existing Case)**
File Size: 13.1 MB

Download Link →

- ↓ DOWNLOAD
- 🚩 FLAG
- 👤 SHARE
- 📁 ADD TO CASE
- ↔ REASSIGN
- ☰ VIEW AUDIT TRAIL
- ✖ DELETE

Source
Serial# x78011815
Model AXON Flex

- CASES
- 14-0000

- CATEGORIES
- Administrative

Training Video | [edit]
ID: 14-0000

Assigned To: **Garwacki, Jeffrey (3292)**
Recorded: **28 Oct 2014 14:24:37 -05:00**
Uploaded On: **28 Oct 2014 14:27:03 -05:00**
Uploaded By: **Garwacki, Jeffrey (3292)**
Deletion: **Unscheduled (Existing Case)**

13.1 MB



Training Video

ID 14-0000
Recorded Date 28 Oct 2014 - 14:24:37
Uploaded Date 28 Oct 2014 - 14:27:03
Uploaded By Garwacki, Jeffrey
Size 13.1 MB

FILENAME	TYPE	STATUS	SIZE	CREATED
Training_Video.mp4	Original	Available	13.1 MB	28 Oct 2014 14:26:11 -05:00



Click Link to Download Video

Close

10/28/14

CASES

- 14-0000

CATEGORIES

Training Video | [edit]

ID: 14-0000



View Audit Trail (Chain of Custody)



Assigned To: **Garwacki, Jeffrey (3292)**
Recorded: **28 Oct 2014 14:24:37 -05:00**
Uploaded On: **28 Oct 2014 14:27:03 -05:00**
Uploaded By: **Garwacki, Jeffrey (3292)**
Deletion scheduled for: **Unscheduled (Existing Case)**
File Size: **13.1 MB**

- DOWNLOAD
- FLAG
- SHARE
- ADD TO CASE
- REASSIGN
- VIEW AUDIT TRAIL**
- DELETE

Source
Serial# x78011815
Model AXON Flex

CASES
• 14-0000

CATEGORIES
• Administrative

TASER AXON FLEX ON-OFFICER VIDEO EVIDENCE.COM

#	Date	Time	User	Activity
15	27 Sep 2012	08:44:21 (-05:00)	Combs, Jeri (8088) Username: jmc3038	Evidence Record Downloaded. Internal Record ID: FILE:F4CBF815940847498A78559378A398D0@PA- 831F3238C168413882A2A12A701CB821 Client IP Address: 12.181.197.100
16	27 Sep 2012	09:12:19 (-05:00)	Combs, Jeri (8088) Username: jmc3038	Evidence Record Accessed. Client IP Address: 12.181.197.100
17	27 Sep 2012	09:12:33 (-05:00)	Combs, Jeri (8088) Username: jmc3038	Evidence Record Downloaded. Internal Record ID: FILE:F4CBF815940847498A78559378A398D0@PA- 831F3238C168413882A2A12A701CB821 Client IP Address: 12.181.197.100



TASER AXON FLEX ON-OFFICER VIDEO SECURITY FEATURES

NO ABILITY TO ALTER/DELETE VIDEO FROM DVR

ONLY ADMIN HAS ACCESS TO DELETE VIDEOS

TWO-FACTOR AUTHENTICATION TO DELETE

MUST HAVE E.COM ACCOUNT TO ACCESS STORAGE SITE

ORIGINAL VIDEO NEVER ALTERED

NO HUMAN INTERACTION NEEDED TO UPLOAD

ROLES & PERMISSIONS

AUDIT TRAIL NOTES EVERY ACTION TO VIDEO

DIGITAL FINGERPRINT CREATED ON FLEX DEVICE



**TASER AXON FLEX ON-OFFICER VIDEO
SECURITY FEATURES**

DATA SURVIVABILITY 99.99999999%

CHANCE OF ALTERING VIDEOS W/ MATCHING FINGERPRINT

1 IN 4,500,000,000,000,000

WATERMARK PLACED ACROSS VIDEO WHEN DOWNLOADED

**E.COM CAN COMPARE COPY FINGERPRINT TO ORIGINAL
FINGERPRINT TO PROVE AUTHENTICITY**

**HASH TAGGING (SHA 128) EVERY 3MB AND ENTIRE FILE
AES256 BIT ENCRYPTED CONNECTION TO E.COM**

TASER AXON FLEX ON-OFFICER VIDEO

EVIDENCE.COM



Upload & View Multiple Evidence Formats

Upload, catalog and maintain in-car, fixed camera and on-officer video, as well as documents and pictures. Whether its an MPEG video, JPEG image or Microsoft Word document, EVIDENCE.COM makes it easy to upload, store and manage any file.



Case Management Functionality

The Case Management feature EVIDENCE.COM allows you to easily group digital evidence together in user defined folders, add notes pertinent to the case, share case files with other users, and move cases through the judicial process towards closure. Powerful search, dashboards and auditing records enable you to quickly find, view and update cases.

TASER AXON FLEX ON-OFFICER VIDEO EVIDENCE.COM



Sharing and Collaboration Capabilities

EVIDENCE.COM allows you to harness the power of collaboration within your agency with our sharing features. Set up permissions based on roles to determine who can share evidence and cases, and what a user can do with shared evidence. Remove the requirements to download, check in, check out, and transport physical media by implementing sharing of digital evidence within EVIDENCE.COM. EVIDENCE.COM also tracks all shared activity to maintain strict chain of custody over your digital evidence.



Manage Data Lifecycle

Not all data is created equal. Some needs to be retained forever, other data can be deleted quickly. EVIDENCE.COM gives you the ability to mark each piece of evidence with a deletion policy that's automatically executed without any manual intervention on your part. As data becomes more or less important to your agency, policies can be applied to manage it accordingly saving you endless hours managing these policies manually.




TASER AXON FLEX ON-OFFICER VIDEO EVIDENCE.COM



Securely Access Your Data From Anywhere

Because EVIDENCE.COM allows secure access through a web browser, data can be accessed wherever you are and completely on your terms. Lock down access to only from within your agency or allow access from courtrooms and at home. The choice is yours and EVIDENCE.COM gives you complete access control.

No matter how your agency chooses to access EVIDENCE.COM, we protect every login with 256 bit encryption and advanced security monitoring.

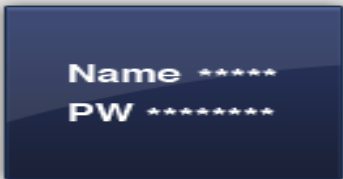

Create Customized User Permissions

EVIDENCE.COM allows you to fully customize and control access to your evidence through user maintained roles and permissions. This intuitive feature lets you decide who can see, download, redact, share and edit evidence while tracking all activity in an audit log that follows each piece of evidence. Customized roles allow you to specifically target permissions based on job requirements and need to access evidence, eliminating any unnecessary or incorrect access.



Chain of Custody Tracking and Auditability

EVIDENCE.COM gives your agency the confidence to know exactly what has occurred with every piece of digital evidence from archive to deletion. Detailed audit logs allow you to see every single transaction that has occurred, whether system or user caused. Summary information tracks total number of views, downloads and access attempts. Detailed information gives you time and date, user name, and action taken. Chain of custody features in EVIDENCE.COM insures your evidence remains secure and trusted.



TASER AXON FLEX ON-OFFICER VIDEO
FWPD GENERAL ORDERS

G.O. 506.03